


Automatic Reed Hooks

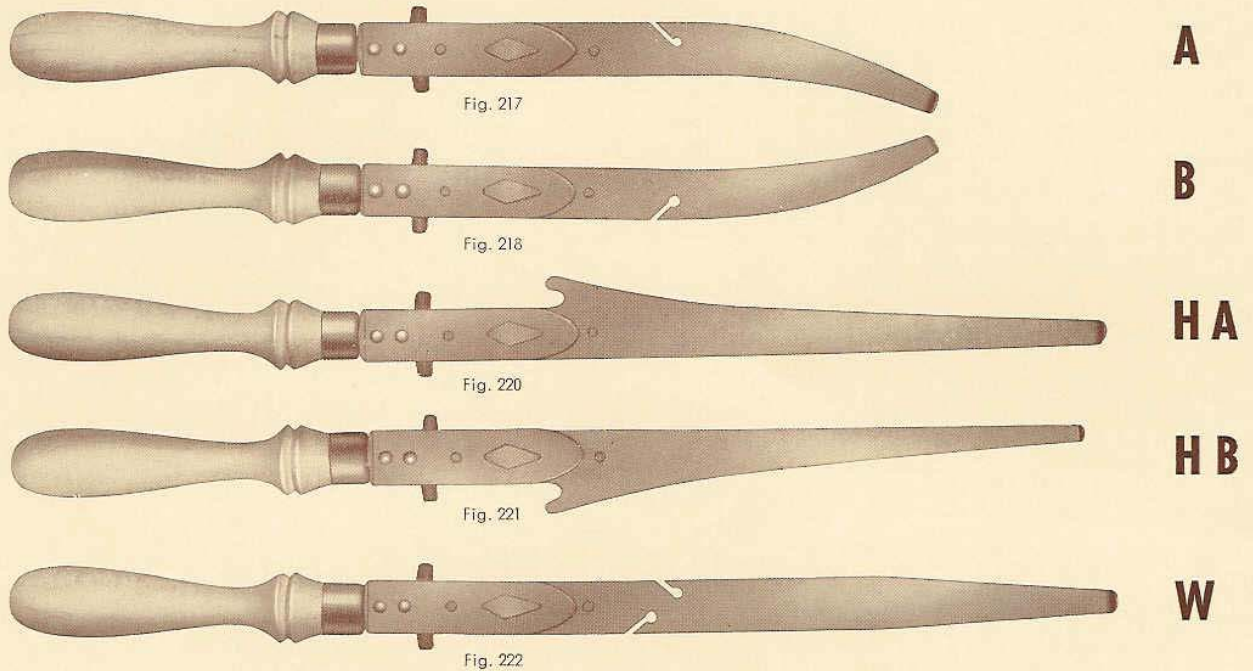

When pushed in and out these reed hooks progress automatically by one dent.

Model A: works from left to right, when the slot is on top.
Model B: works from right to left, when the slot is on top.

Method of drawing-in: Two drawers. After the heald frame both draw-in the reed together.

Model HA: works from left to right, when the nose is on top.
Model HB: works from right to left, when the nose is on top.

Method of drawing-in: One drawer draws-in both heald frames and reed.
Models HA and HB are usually used with the reed lying horizontal.

Model W: can be used for either method.

When ordering it is essential to state the code letters of the model required and also for which of the following reed densities it will be used. This is important, as on the centre piece the distance between the noses, which control the progress from dent to dent, must correspond to the reed density.

No. 0	for densities from 320-260	dents per 100 mm	= approx 80-65	per 1"
No. 1	" "	" 250-200	" " "	" 60-50 " 1"
No. 2	" "	" 190-160	" " "	" 50-40 " 1"
No. 3	" "	" 150-120	" " "	" 40-30 " 1"
No. 4	" "	" 110-90	" " "	" 30-22 " 1"
No. 5	" "	" 80-60	" " "	" 20-15 " 1"
No. 6	" "	" 50-40	" " "	" 12-10 " 1"
No. 7	" "	" 30-20	" " "	" 8-5 " 1"
No. 8	" "	" 20-10	" " "	" 5- 2 1/2 " 1"